

3RW Soft Starters

General data

Overview

The advantages of the SIRIUS soft starters at a glance:

- Soft starting and smooth ramp-down¹⁾
- Stepless starting
- Reduction of current peaks
- Avoidance of mains voltage fluctuations during starting
- Reduced load on the power supply network

- Reduction of the mechanical load in the operating mechanism
- Considerable space savings and reduced wiring compared with conventional starters
- Maintenance-free switching
- Very easy handling
- Fits perfectly in the SIRIUS modular system



| | SIRIUS 3RW30/31 Standard applications | SIRIUS 3RW40 | SIRIUS 3RW44 High-feature applications |
|------------------------------------------------------|------------------------------------------|---------------------------------------------------------------------------------------------|-------------------------------------------|
| Rated current up to 40 °C | A | 3 ... 100 | 134 ... 432 |
| Rated operational voltage | V | 200 ... 575 | 200 ... 600 |
| Motor rating at 400 V | | | |
| • Inline circuit | kW | 1.1 ... 55 | 75 ... 250 |
| • Inside-delta circuit | kW | -- | -- |
| Temperature range | °C | -25 ... +60 | -25 ... +60 |
| Soft starting/ramp-down | | ✓ ¹⁾ | ✓ |
| Voltage ramp | | ✓ | ✓ |
| Starting/stopping voltage | % | 40 ... 100 | 40 ... 100 |
| Starting and ramp-down time | s | 0 ... 20 | 0 ... 20 |
| Torque control | | -- | -- |
| Starting/stopping torque | % | -- | -- |
| Torque limit | % | -- | -- |
| Ramp time | s | -- | -- |
| Integral bypass contact system | | ✓ ²⁾ | ✓ |
| Intrinsic device protection | | -- | ✓ |
| Motor overload protection | | -- | ✓ |
| Thermistor motor protection | | -- | ✓ |
| Adjustable current limiting | | -- | ✓ |
| Inside-delta circuit | | -- | ✓ |
| Breakaway pulse | | -- | ✓ |
| Creep speed in both directions of rotation | | -- | ✓ |
| Pump ramp-down | | -- | ✓ ⁶⁾ |
| DC braking | | -- | ✓ ^{3) 6)} |
| Combined braking | | -- | ✓ ^{3) 6)} |
| Motor heating | | -- | ✓ |
| Communication | | -- | With PROFIBUS DP (optional) (optional) |
| External display and operator module | | -- | |
| Operating measured value display | | -- | ✓ |
| Error logbook | | -- | ✓ |
| Event list | | -- | ✓ |
| Slave pointer function | | -- | ✓ |
| Trace function | | -- | ✓ ⁴⁾ |
| Programmable control inputs and outputs | | -- | ✓ |
| Number of parameter sets | | 1 (2 with 3RW31) | 1 |
| Parameterization software (Soft Starter ES) | | -- | ✓ |
| Power semiconductors (thyristors) | | 2 controlled phases | 2 controlled phases |
| Spring-loaded terminals | | ✓ (only 3RW30 03) | ✓ |
| Screw terminals | | ✓ | ✓ |
| UL/CSA | | ✓ ⁵⁾ | ✓ |
| CE marking | | ✓ | ✓ |
| Soft starting under heavy starting conditions | | -- | ✓ ⁶⁾ |
| Configuring support | | Win-Soft Starter, electronic selection slider ruler, Technical Assistance ++49 911 895 5900 | |

✓ Function is available

-- Function not available.

¹⁾ Only soft starting available for 3RW30 ..-1AA12 and 3RW31.

²⁾ Not available for 3RW30 03.

³⁾ Not possible in inside-delta circuit.

⁴⁾ Trace function with Soft Starter ES software.

⁵⁾ For 3RW30 03 up to 230 V.

⁶⁾ Calculate soft starter and motor with size allowance where required.
More information can be found on the Internet at

<http://www.siemens.com/softstarter>